



















 

















Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Muting		Mute / Dimmer
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	<</<I/Slow/Tunin		<< / Tune-
	Tuning+/Slow		>> / Tune+
	I<</Preset-		I<< / Preset-
	>>I/Preset+		>>I / Preset+
	Bass Level		Sound / Title
	Audio		Audio / Lang I/II
	Subtitle		Subtitle / EQ
	Open/Close		Eject / Surround
	Band		Picture / Format
	Sleep		Sleep / Timer
	Tv/Video		TV/Radio /
	DVD Menu		D.Menu / Top

Originalfernbedienung Ersatzfernbedienung

	DVD Setup		Setup / OPT /
	Name		Text / Goto
	AMP Menu		Menu / Home
	Up		Up
	Angle		Info / Angle
	Left		Left
	Enter		OK
	Right		Right
	Clear		Exit / Cancel / Clear
	Down		Down
	Return		Back / Return
	Vol+		Vol+
	Memory		Smart / List
	Vol-		Vol-
	Display		Display / Media
	1		1
	2		2



