
 
 
 
 

 

 





 

 

 
 
 

 


 

 
 

 
 

 

 


 
 

 

 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	+10		Guide
	Function		Menu
	Play		Play
	Stop		Stop
	Pause/Set		Pause
	Vol+		Vol +

Originalfernbedienung Ersatzfernbedienung

	Vol-		Vol -
	Disc Direct Play 1		Shift + 1
	Disc Direct Play 2		Shift + 2
	Disc Direct Play 3		Shift + 3
	Disc Direct Play 4		Shift + 4
	Disc Direct Play 5		Shift + 5
	Clear		Exit
	Preset		Info
	<</ <<		<<
	>>/ >>		>>
	Sleep		Sleep
	Random/Repeat		Text
	CD Edit/Check		Pre Ch
	PRGM		Options
	GEQ		Media
	T-Bass		Dual
	Timer		AV





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
BAND	Band	SEARCH TV/R	TV/R
CLOCK	Clock	ECO 3D	3D
MONO TUNER	Mono Tuner	PICTURE FORMAT	Format

