
 



 
 


 

 












 





 















 











Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|----------|---|------------------------|
|  | Power |  | Power |
|  | EPG |  | Guide / EPG / -/-- |
|  | REP |  | TV/Radio / |
|  | Mute |  | Mute / Dimmer |
|  | Rec List |  | Shift + Rec / Rec Mode |
|  | CH List |  | Smart / List |
|  | Subtitle |  | Subtitle / EQ |
|  | Eject |  | Eject / Surround |
|  | Rec |  | Rec / Rec Mode |
|  | Stop |  | Stop / Hold |
|  | I<< |  | I<< / Preset- |
|  | >>I |  | >>I / Preset+ |
|  | Pause |  | Pause / Step / Freeze |
|  | Play |  | Play / Slow |
|  | << |  | << / Tune- |
|  | >> |  | >> / Tune+ |
|  | Source |  | AV / Input / RDS |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|---------|---|-----------------------|
|  | Up |  | Up |
|  | Display |  | Display / Media |
|  | Left |  | Left |
|  | OK |  | OK |
|  | Right |  | Right |
|  | Menu |  | Menu / Home |
|  | Down |  | Down |
|  | Exit |  | Exit / Cancel / Clear |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |



