 



 
 
 
 
 
 
 

 



 






 

 
 


 

 


 
 
 
 

 


 
 


 



 

 
 


 

 

 
 

 

 






**Originalfernbedienung    Ersatzfernbedienung**

|   |            |   |       |
|---|------------|---|-------|
|    | Power      |    | Power |
|    | Source     |    | AV    |
|    | Open/Close |    | Eject |
|    | Sleep      |    | Sleep |
|    | 1          |    | 1     |
|    | 2          |    | 2     |
|    | 3          |    | 3     |
|    | 4          |    | 4     |
|    | 5          |    | 5     |
|    | 6          |    | 6     |
|   | 7          |   | 7     |
|  | 8          |  | 8     |
|  | 9          |  | 9     |
|  | 0          |  | 0     |
|  | Dolby PL   |  | Dual  |
|  | DSP/EQ     |  | Guide |
|  | I<<<       |  | I<<<  |

**Originalfernbedienung    Ersatzfernbedienung**

|   |            |   |         |
|---|------------|---|---------|
|    | >>I        |    | >>I     |
|    | <<         |    | <<      |
|    | >>         |    | >>      |
|    | Stop       |    | Stop    |
|    | Play       |    | Play    |
|    | Pause      |    | Pause   |
|    | Vol+       |    | Vol +   |
|    | Vol-       |    | Vol -   |
|    | Mute       |    | Mute    |
|    | Repeat     |    | Text    |
|   | Tuning+    |   | Ch +    |
|  | Tuning-    |  | Ch -    |
|  | Disc Menu  |  | D. Menu |
|  | Menu       |  | Menu    |
|  | Title Menu |  | TV/R    |
|  | Tools      |  | Options |
|  | Info       |  | Info    |

 



 

 
 
 

 
 
 










 
 
 

 
 



 












 
 

 

 
 
 
 

 

 

 
 
 

 
 



 

 
 




**Originalfernbedienung    Ersatzfernbedienung**

|   |             |   |       |
|---|-------------|---|-------|
|    | Power       |    | Power |
|    | Function Tv |    | AV    |
|    | Sleep       |    | Sleep |
|    | 1           |    | 1     |
|    | 2           |    | 2     |
|    | 3           |    | 3     |
|    | 4           |    | 4     |
|    | 5           |    | 5     |
|    | 6           |    | 6     |
|    | 7           |    | 7     |
|  | 8           |  | 8     |
|  | 9           |  | 9     |
|  | 0           |  | 0     |
|  | <<          |  | <<    |
|  | >>          |  | >>    |
|  | Stop        |  | Stop  |
|  | Play        |  | Play  |

**Originalfernbedienung    Ersatzfernbedienung**

|   |        |   |         |
|---|--------|---|---------|
|    | Pause  |    | Pause   |
|    | Vol+   |    | Vol +   |
|    | Vol-   |    | Vol -   |
|    | Mute   |    | Mute    |
|    | CH+    |    | Ch +    |
|    | CH-    |    | Ch -    |
|    | Menu   |    | Menu    |
|    | Tools  |    | Options |
|    | Info   |    | Info    |
|    | Return |    | Back    |
|  | Exit   |  | Exit    |
|  | Up     |  | Up      |
|  | Down   |  | Down    |
|  | Right  |  | Right   |
|  | Left   |  | Left    |
|  | Enter  |  | Ok      |
|  | Red    |  | Red     |



