

 

 

 

 
 

 

 

 

 



 

 

 

 



 
 













 





 

 
 


 
 
 

 


 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	E-Manual		D. Menu
	Ratio		Format
	Input		AV
	TV / RAD		TV/R
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	List		List
	Q.View		Pre Ch

Originalfernbedienung Ersatzfernbedienung

	Vol +		Vol +
	Vol -		Vol -
	FAV		Shift + Pre Ch
	3D		3D
	Mute		Mute
	P +		Ch +
	P -		Ch -
	Info		Info
	SMART		Smart
	My APPS		Media
	Up		Up
	Right		Right
	Down		Down
	Left		Left
	OK		Ok
	Back		Back
	Guide		Guide



