 
 





 
 


 


 


 



 

 
 
 

 










Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	TV		Smart
	Tv/Rad		TV/R
	Audio		Dual
	Aspect		3D
	USB		Media
	FAV		Pre Ch
	Exit		Exit
	Menu		Menu
	Back		Back
	P+		Ch +
	P-		Ch -
	Up		Up
	Down		Down
	Right		Right
	Left		Left

Originalfernbedienung Ersatzfernbedienung

	OK		Ok
	Vol+		Vol +
	Vol-		Vol -
	Red/Multi Feed		Red
	Green		Green
	Yellow		Yellow
	Blue/Timer		Blue
	EPG		Guide
	Info		Info
	Text		Text
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7





Originalfernbedienung

Ersatzfernbedienung

	8		8
	9		9
	0		0
	SUB		Subt
	Format		Format

Originalfernbedienung

Ersatzfernbedienung

