

 

 
 


 

 

 
 

 
 

 
 

 

 



 
 
 
 
 

 
 
 





 

 

 
 
 
 
 

 

 



 

 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Disc		Blue
	USB		Yellow
	Tuner		Green
	AUX/MP3 Link		Red
	A-B		3D
	DIM Mode		Media
	Audio		Dual
	RDS/Display		Info
	System Menu		Menu
	Disc Menu		D. Menu
	DSC		Smart
	Loud/DBB		Options
	Up/Slow		Up
	Down/Zoom		Down
	>>		>>
	<<		<<

Originalfernbedienung Ersatzfernbedienung

	OK		Ok
	>		>>
	<		<<
	Play		Play
	Pause		Pause
	Stop		Stop
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8





Originalfernbedienung Ersatzfernbedienung

9	9	9	9
0	0	0	0
CLOCK	Clock	TIMER AV	AV
ANGLE PROG	Prog/Angle	SHIFT + PROG SLEEP	Shift + Sleep
SLEEP TIMER	Timer/Sleep	PROG SLEEP	Sleep
GOTO	Goto	FAV PRE-CH	Pre Ch
SUBTITLE	Subtitle	AD SUBT	Subt

Originalfernbedienung Ersatzfernbedienung

