











 

 

 










 









Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-----------------|---|---------|
|  | Power |  | Power |
|  | Red/Rec/Instant |  | Red |
|  | Green/<< |  | Green |
|  | Yellow/Stop |  | Yellow |
|  | Blue/play |  | Blue |
|  | White/>>/□ |  | >> |
|  | >◆ |  | D. Menu |
|  | [] |  | Guide |
|  | [o]/Timer |  | Sleep |
|  | [?] |  | Eject |
|  | [◆] |  | Format |
|  | [≡]/Text |  | Text |
|  | Menu |  | Menu |
|  | OK |  | Ok |
|  | Up |  | Up |
|  | Down |  | Down |
|  | Right |  | Right |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|------|---|--------|
|  | Left |  | Left |
|  | Vol+ |  | Vol + |
|  | Vol- |  | Vol - |
|  | Mute |  | Mute |
|  | P+ |  | Ch + |
|  | P- |  | Ch - |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |
|  | P<P |  | Pre Ch |





Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|----------------------|--|---------|
| | [i+] | | Info |
| | I-II | | Dual |
| | [><] | | Subt |
| | [112] | | 3D |
| | []> | | AV |
| | ♪ Smart | | Smart |
| | [] Smart | | Media |
| | [<>] | | Back |
| | [-o-]/Active Control | | Options |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|--|--|--|
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |





| Originalfernbedienung | Ersatzfernbedienung | Originalfernbedienung | Ersatzfernbedienung |
|---|---------------------|---|---------------------|
|  | Power |  | Power |
|  | Red/Rec/Instant |  | Red |
|  | Green/<< |  | Green |
|  | Yellow/Stop |  | Yellow |
|  | Blue/Play |  | Blue |
|  | White/>>/□ |  | >> |
|  | [o]/Timer |  | Sleep |
|  | [?] |  | Eject |
|  | [♦] |  | Format |
|  | [≡]/Text |  | Text |
|  | Menu |  | Menu |
|  | OK |  | Ok |
|  | Up |  | Up |
|  | Down |  | Down |
|  | Right |  | Right |
|  | Left |  | Left |
|  | Vol+ |  | Vol + |
|  | Vol- |  | Vol - |
|  | Mute |  | Mute |
|  | P+ |  | Ch + |
|  | P- |  | Ch - |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |
|  | P<P |  | Pre Ch |
|  | [i+] |  | Info |
|  | I-II |  | Dual |





Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|----------------------|---|---------|
|  | [> <] |  | Subt |
|  | [1 2] |  | 3D |
|  | []→ |  | AV |
|  | ♪ Smart |  | Smart |
|  | [] Smart |  | Media |
|  | [<>] |  | Back |
|  | [-o-]/Active Control |  | Options |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

Originalfernbedienung Ersatzfernbedienung

| | |
|--|--|
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |





| Originalfernbedienung | Ersatzfernbedienung | Originalfernbedienung | Ersatzfernbedienung |
|---|---------------------|---|---------------------|
|  | Power |  | Power |
|  | Red/Rec/Instant |  | Red |
|  | Green/<< |  | Green |
|  | Yellow/Stop |  | Yellow |
|  | Blue/Play |  | Blue |
|  | White/>>/□ |  | >> |
|  | [o]/Timer |  | Sleep |
|  | [?] |  | Eject |
|  | [◆] |  | Format |
|  | [≡]/Text |  | Text |
|  | Menu |  | Menu |
|  | OK |  | Ok |
|  | Up |  | Up |
|  | Down |  | Down |
|  | Right |  | Right |
|  | Left |  | Left |
|  | Vol+ |  | Vol + |
|  | Vol- |  | Vol - |
|  | Mute |  | Mute |
|  | P+ |  | Ch + |
|  | P- |  | Ch - |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |
|  | P<P |  | Pre Ch |
|  | [i+] |  | Info |
|  | I-II |  | Dual |



