





 

 



 

 

 
 





 
 








Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	DTV/ATV		Smart
	Back		Back
	P.Mode		Shift + Format
	S.Mode		Dual
	Sleep		Sleep

Originalfernbedienung Ersatzfernbedienung

	MTS		Options
	Aspect		3D
	FAV/List		Pre Ch
	Media		Media
	Freeze		Eject
	Vol+		Vol +
	Vol-		Vol -
	CH+		Ch +
	CH-		Ch -
	Menu		Menu
	Source		AV
	Exit		Exit
	Display		Info
	Up		Up
	Down		Down
	Right		Right
	Left		Left





**Originalfernbedienung Ersatzfernbedienung**

	Enter		Ok
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	<<		<<
	Play		Play
	Pause		Pause
	>>		>>
	I<</Cancel		I<<
	>>I/SubPg		>>I
	Stop/Index		Stop
	Tv/Radio		TV/R
	Subtitle		Subt
	Size		Format
	Reveal		List
	Hold		D. Menu

**Originalfernbedienung Ersatzfernbedienung**

	Text		Text

