





 






 




 


 


 
 
 
 

 







 
 



 




 



 



 

 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Setup		Options
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Info		Info
	FAV		Pre Ch
	Menu		Menu
	EPG		Guide

Originalfernbedienung Ersatzfernbedienung

	Exit		Exit
	Recall		Back
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Vol+		Vol +
	Vol-		Vol -
	Page+		Ch +
	Page-		Ch -
	Red		Red
	Green		Green
	Yellow/Zoom		Yellow
	Blue/Option		Blue
	TTX		Text
	Sub.T		Subt





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	Tv/Radio		TV/R				
	Audio		Dual				
	Format		Format				
	Aspect		3D				
	Rec		Rec				
	Goto		Media				
	USB		AV				
	T/S		Smart				
	<<		<<				
	>>		>>				
	Play		Play				
	Pause		Pause				
	Stop		Stop				

