




 

 

 



 


 


 

 





Originalfernbedienung Ersatzfernbedienung

	Open / Close		Eject / Surround
	Operate		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--		Shift + Guide / EPG / -/--
	CH +		CH+ / Page+
	CH -		CH- / Page-
	C / Erase		Shift + Exit / Cancel / Clear
	Direct		Setup / OPT /



 




 




 


 
 
 

Originalfernbedienung Ersatzfernbedienung

	i		Info / Angle
	Guide		Guide / EPG / -/--
	Rec Mode		Shift + Rec / Rec Mode
	Input		AV / Input / RDS
	Timer On / Off		Sleep / Timer
	Time Shift		Text / Goto
	HDD		Shift + 7
	DVD		Shift + 2
	TV / DVD		TV/Radio /
	Start Menu		Menu / Home
	Up		Up
	Rec List / DVD Top Menu		Smart / List
	Right		Right
	Down		Down
	Original / Playlist / DVD Menu		D.Menu / Top
	Left		Left
	Exit		Exit / Cancel / Clear





Originalfernbedienung Ersatzfernbedienung

	Return		Back / Return
	<< REV		<< / Tune-
	Set / Enter		OK
	Play		Play / Slow
	Green		Green / APP / Repeat
	Red		Red / Netflix / Search
	Blue		Blue / Prime Video / Random
	>> FWD		>> / Tune+
	Yellow		Yellow / YouTube / Repeat
	Slow		Shift + Play /
	REC		Rec / Rec Mode
	Angle		Shift + Info / Angle
	Stop / Live		Stop / Hold
	Subtitle		Subtitle / EQ
	Audio		Audio / Lang I/II
	Replay		Sound / Title
	I<< / <II F.Adv / Day -		I<< / Preset-

Originalfernbedienung Ersatzfernbedienung

	>>I / F.Adv II> / Day +		>>I / Preset+
	Still / Pause		Pause / Step / Freeze
	Skip Search		Shift + Red / Netflix /
	Chapter Mark		Fav / Marker / PC
	Function		Picture / Format
	REC Pause		Shift + Pause / Step /
	On Screen Tamper Proof		Vol+
	RGB OFF Tamper Proof		Vol-
	Display / Back Light		Display / Media
	REC Stop		Shift + Stop /
	Direct REC TV		Shift + Eject / Surround

