
 
 

 
 



 
 


 
 

 
 
 
 







 




 

 








Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Play		Play
	Pause		Pause
	<<		<<
	>>		>>
	I<<		I<<
	>>I		>>I
	Stop		Stop
	TV/TXT		Text
	Cancel		Eject
	Reveal		D. Menu
	Hold		Media
	Size		3D
	Subpage		Shift + Subt
	Index		List
	Red		Red
	Green		Green

Originalfernbedienung Ersatzfernbedienung

	Yellow		Yellow
	Blue		Blue
	CH+		Ch +
	CH-		Ch -
	Source		AV
	Vol+		Vol +
	Vol-		Vol -
	Menu		Menu
	Rec		Rec
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	DVB		Smart
	Exit		Exit
	1		1









 

 

 

 







Originalfernbedienung Ersatzfernbedienung

	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--	 + 	Shift + Guide
	Recall		Back
	Picture	 + 	Shift + Format
	Sound	 + 	Shift + Dual
	Nicam/A2		Options
	Mute		Mute
	Sleep		Sleep
	Tv/Radio		TV/R

Originalfernbedienung Ersatzfernbedienung

	FAV		Pre Ch
	FAV+	 + 	Shift + Ch +
	FAV-	 + 	Shift + Ch -
	Subtitle		Subt
	Pic Format		Format
	Text	 + 	Shift + Text
	Display		Info
	Language		Dual
	EPG		Guide

