



Originalfernbedienung Ersatzfernbedienung




 







 

 
	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	List		List
	Recall		Back
	FAV		Pre Ch
	Subtitle		Subt
	Info		Info

Originalfernbedienung Ersatzfernbedienung

	TTX		Text
	Vol+		Vol +
	Vol-		Vol -
	Page+		Smart
	Page-		Media
	CH+		Ch +
	CH-		Ch -
	Lang		Dual
	L/R		Options
	TV/Radio		TV/R
	EPG		Guide
	Menu		Menu
	Exit		Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	OK		Ok
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Play		Play
	Pause		Pause
	Stop		Stop
	Rec		Rec
	<<		<<
	>>		>>
	l<<		l<<
	>>l		>>l
	Timer		AV
	PVR		Sleep
	V-Format		Format
	Il>		Eject

