











 



 
 
 
 









 

 




 






 




**Originalfernbedienung Ersatzfernbedienung**

	Power		Power
	Vol+		Vol +
	Vol-		Vol -
	Home		Smart
	P+		Ch +
	P-		Ch -
	Guide		Guide
	Input		AV
	Back		Back
	Exit		Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Colors		Red
	Play		Play

**Originalfernbedienung Ersatzfernbedienung**

	Stop		Stop
	123#		Pre Ch
	Rakuten Tv		TV/R
	Netflix		Media
	YouTube		Shift + Media

