

 
 







 



 




 

 

 




 







Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	5		5
	4		4
	6		6
	7		7
	8		8
	9		9
	0		0
	PR.List		List
	Recall		Back
	Vol+		Vol +
	Vol-		Vol -
	Pic.Mode		Shift + Format








 

 

 

 




 
 
 
 
 
 


 

 



 

Originalfernbedienung Ersatzfernbedienung

	S.Mode		Shift + Dual
	Source		AV
	CH+		Ch +
	CH-		Ch -
	Exit		Exit
	Menu		Menu
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Zoom		Eject
	Sleep		Sleep
	Rec		Rec
	Rec List		Smart
	Red		Red
	Green		Green

 





Originalfernbedienung Ersatzfernbedienung

	Yellow		Yellow
	Blue		Blue
	FAV		Pre Ch
	Tv/Radio		TV/R
	I/II/Audio		Dual
	Subtitle		Subt
	Index		Media
	Reveal		Format
	ATV/DTV		Options
	Info		Info
	Text		Text
	Play/Size		Play
	Pause/Subpage		Pause
	Stop/Hold		Stop
	L<<		L<<
	R>>L		R>>L
	R>>		R>>

Originalfernbedienung Ersatzfernbedienung

	>>		>>

