





 

 

 



 



 





 























Originalfernbedienung Ersatzfernbedienung

	AV		AV / Input / RDS
	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	P+		CH+ / Page+
	0		0
	V+		Vol+
	P-		CH- / Page-
	V-		Vol-

Originalfernbedienung Ersatzfernbedienung

	Up/CH+		Up
	Left/Vol-		Shift + Left
	←		Left
	OK		OK
	Right/Vol+		Right
	Down/CH-		Down
	Menu		Menu / Home
	Exit		Exit / Cancel / Clear
	Info		Info / Angle
	EPG		Guide / EPG / -/--
	FAV		Fav / Marker / PC
	TXT		Text / Goto
	S-T		D.Menu / Top
	Tv/R		TV/Radio /
	Timer		Sleep / Timer
	Edit		Setup / OPT /
	Del		Shift + Exit / Cancel / Clear





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
 Audio	 Audio / Lang I/II		
 Red	 Red / Netflix / Search		
 Green	 Green / APP / Repeat		
 Yellow	 Yellow / YouTube / Repeat		
 Blue	 Blue / Prime Video / Random		

