



 

 

 

 

 

 

 





 



 

 

 







Originalfernbedienung Ersatzfernbedienung

 



	3D		Picture / Format
	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Prog+		CH+ / Page+
	0		0
	Vol+		Vol+
	Prog-		CH- / Page-
	Vol-		Vol-

Originalfernbedienung Ersatzfernbedienung

	Up/CH+		Up
	Left/Vol-		Left
	OK		OK
	Right/Vol+		Right
	Down/CH-		Down
	Menu		Menu / Home
	Exit		Exit / Cancel / Clear
	Info		Info / Angle
	EPG		Guide / EPG / -/--
	List		Smart / List
	TXT		Text / Goto
	S-T		Sound / Title
	Tv/R		TV/Radio /
	Timer		Sleep / Timer
	Audio		Audio / Lang I/II
	Play		Play / Slow
	Pause		Pause / Step / Freeze





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	Stop		Stop / Hold
	Rec		Rec / Rec Mode
	←		Back / Return
	<<		<< / Tune-
	Red		Red / Netflix / Search
	>>		>> / Tune+
	Green		Green / APP / Repeat
	I<<		I<< / Preset-
	Yellow		Yellow / YouTube / Repeat
	>>I		>>I / Preset+
	Blue		Blue / Prime Video / Random

