 

 

 

 



 



 

 



 
 


 

 

 
 
 

 
 
 











 



 





 



 

 

 







Originalfernbedienung Ersatzfernbedienung

	Input/Tuner		AV / Input / RDS
	Power		Power
	Open/Close		Eject / Surround
	iPod		Shift + 8
	PIP		Zoom / Size
	Display		Display / Media
	Home		Menu / Home
	Disc Menu		D.Menu / Top
	Up/Presets+		Up
	Left/Tun.-		Left
	Enter		OK
	Right/Tun.+		Right
	Down/Presets-		Down
	Return		Back / Return
	Title/PopUp		Shift + Sound / Title
	Stop		Stop / Hold
	Play		Play / Slow

Originalfernbedienung Ersatzfernbedienung

	Pause/step		Pause / Step / Freeze
	l<< Skip		l<< / Preset-
	<< Scan		<< / Tune-
	Scan >>		>> / Tune+
	Skip >>l		>>l / Preset+
	SKP Level		Setup / OPT /
	Vol+		Vol+
	Sound		Sound / Title
	Mute		Mute / Dimmer
	Vol-		Vol-
	Night		TV/Radio /
	1		1
	2		2
	3		3
	Marker		Fav / Marker / PC
	4		4
	5		5



