 




 







Originalfernbedienung Ersatzfernbedienung


 
 

	Power		Power
	Mute		Mute
	Menu		Menu
	Exit		Exit
	Up / CH +		Up
	Up / CH +		Ch +
	Down / CH -		Down
	Down / CH -		Ch -
	Right / V +		Right
	Right / V +		Vol +
	Left / V -		Left
	Left / V -		Vol -
	OK		Ok
	TV / Radio		TV/R
	CH List		List
	Recent CH / Page		Pre Ch
	Recent CH / Page		I<<<

Originalfernbedienung Ersatzfernbedienung

	EPG / Page +		Guide
	EPG / Page +		>>I
	1 / Fav A / Red		1
	1 / Fav A / Red		Red
	2 / Fav B / Green		2
	2 / Fav B / Green		Green
	3		3
	4 / Fav C / Yellow		4
	4 / Fav C / Yellow		Yellow
	5 / Fav D / Blue		5
	5 / Fav D / Blue		Blue
	6		6
	7		7
	8		8
	9		9
	0		0
	Sound Track		Dual





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	Pause / Play		Play				
	Pause / Play		Pause				
	Parental Control		Media				
	Sub / TXT		Subt				
	Sub / TXT		Text				
	Info		Info				
	ATTR		3D				

