












 

 

 

 












 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Eject		Exit
	Open / Close		Eject
	Display / Call		Info
	Channel +		Ch +
	Channel -		Ch -
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0 / AV		0
	0 / AV		AV

Originalfernbedienung Ersatzfernbedienung

	Program		Sleep
	Timer Rec		Shift + Rec
	Rec / OTR		Rec
	Marker / Tape		Vol +
	Jump / Zero		Shift + Back
	Clock / Counter		Guide
	Counter Reset		Pre Ch
	TV / VCR		TV/R
	VCR		Smart
	DVD		Media
	Setup / Menu		Menu
	DVD Menu		D. Menu
	Up		Up
	Down		Down
	Right / TRK +		Right
	Left / TRK -		Left
	Enter / Select		Ok



