












 





Originalfernbedienung    Ersatzfernbedienung

	Power		Power
	Sleep		Sleep / Timer
	Play/Rec		Rec / Rec Mode
	Clock/Timer		Shift + Sleep / Timer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	>10		Guide / EPG / -/-
	7		7
	8		8
	9		9
	0		0
	Cancel		Exit / Cancel / Clear
	Play Mode		Shift + Play / Slow

Slow

Originalfernbedienung    Ersatzfernbedienung

	Repeat		Green / APP / Repeat
	Auto/Mono		Audio / Lang I/II
	CD		Shift + 3
	Tape		Shift + 5
	EXT		AV / Input / RDS
	Tuner		Shift + 6
	Stop		Stop / Hold
	</II		Picture / Format
	Play		Play / Slow
	Muting		Mute / Dimmer
	I<</<<		<< / Tune-
	>>/>>I		>> / Tune+
	Vol-		Vol-
	Vol+		Vol+

