



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	PgUp		Ch +
	PgDn		Ch -
	FAV+		>>I
	FAV-		I<<
	Up/CH+		Up

 
 

 


 
 
 
 
Originalfernbedienung Ersatzfernbedienung

	Down/CH-		Down
	Right		Right
	Left		Left
	OK		Ok
	Vol+		Vol +
	Vol-		Vol -
	Menu		Menu
	Exit		Exit
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	EPG		Guide
	Audio		Dual
	SUB		Subt
	Zoom		Eject
	FAV		Pre Ch





Originalfernbedienung    Ersatzfernbedienung

	List		List
	Pause		Pause
	TXT		Text
	Info		Info
	Tv/Radio		TV/R
	Recall		Back

Originalfernbedienung    Ersatzfernbedienung