



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	? / Audio		Audio / Lang I/II
	0		0
	Aspect / Subtitle		Zoom / Size
	Aspect / Subtitle		Subtitle / EQ
	PIP / Recall		Fav / Marker / PC
	AV		AV / Input / RDS
	Mute		Mute / Dimmer

Originalfernbedienung Ersatzfernbedienung

	i		Info / Angle
	Up / P+		Up
	Up / P+		CH+ / Page+
	Z / Return		Back / Return
	Left / Vol -		Left
	Left / Vol -		Vol-
	OK		OK
	Right / Vol +		Right
	Right / Vol +		Vol+
	TXT / Menu		Menu / Home
	TXT / Menu		Text / Goto
	Down / P-		Down
	Down / P-		CH- / Page-
	TV-G / Top		D.Menu / Top
	Red / Rec		Rec / Rec Mode
	Red / Rec		Red / Netflix / Search
	Green / Play		Play / Slow





**Originalfernbedienung**   **Ersatzfernbedienung**

	Green / Play		Green / APP / Repeat
	Yellow / Pause		Yellow / YouTube / Repeat
	Yellow / Pause		Pause / Step / Freeze
	Blue / Stop		Blue / Prime Video / Random
	Blue / Stop		Stop / Hold
	Scan / I<		I<< / Preset-
	PAT / >I		>>I / Preset+
	S / <<		<< / Tune-
	P / >>		>> / Tune+

**Originalfernbedienung**   **Ersatzfernbedienung**


