



Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-------------------|---|-------------------|
|  | Power |  | Power |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | ? / Audio |  | Audio / Lang I/II |
|  | 0 |  | 0 |
|  | Aspect / Subtitle |  | Zoom / Size |
|  | Aspect / Subtitle |  | Subtitle / EQ |
|  | PIP / Recall |  | Fav / Marker / PC |
|  | AV |  | AV / Input / RDS |
|  | Mute |  | Mute / Dimmer |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|---------------|---|------------------------|
|  | i |  | Info / Angle |
|  | Up / P+ |  | Up |
|  | Up / P+ |  | CH+ / Page+ |
|  | Z / Return |  | Back / Return |
|  | Left / Vol - |  | Left |
|  | Left / Vol - |  | Vol- |
|  | OK |  | OK |
|  | Right / Vol + |  | Right |
|  | Right / Vol + |  | Vol+ |
|  | TXT / Menu |  | Menu / Home |
|  | TXT / Menu |  | Text / Goto |
|  | Down / P- |  | Down |
|  | Down / P- |  | CH- / Page- |
|  | TV-G / Top |  | D.Menu / Top |
|  | Red / Rec |  | Rec / Rec Mode |
|  | Red / Rec |  | Red / Netflix / Search |
|  | Green / Play |  | Play / Slow |





Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|----------------|--|-----------------------------|
| | Green / Play | | Green / APP / Repeat |
| | Yellow / Pause | | Yellow / YouTube / Repeat |
| | Yellow / Pause | | Pause / Step / Freeze |
| | Blue / Stop | | Blue / Prime Video / Random |
| | Blue / Stop | | Stop / Hold |
| | Scan / I< | | I<< / Preset- |
| | PAT / >I | | >>I / Preset+ |
| | S / << | | << / Tune- |
| | P / >> | | >> / Tune+ |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|--|--|--|
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

