


 
 
 

 


 






 



 





 





 







Originalfernbedienung Ersatzfernbedienung

	Power Audio		Power
	Display/Chara		Info
	Tv/Video		TV/R
	Level Meter		Media
	Motion Sensor		Smart
	Title/Del		Options
	Eco/Dimmer		Shift + 3D
	1/Mark		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0

Originalfernbedienung Ersatzfernbedienung

	>10		Pre Ch
	10		Guide
	Karaoke Scoring		Shift + Smart
	Reserve		Shift + Options
	Vocal Masking		Shift + Dual
	Vocal Support		Shift + Subt
	Menu/PL		Menu
	Top Menu/PG		Shift + Menu
	On Screen		Shift + Info
	Fade Muting		Mute
	Up/PTY+		Up
	Down/PTY-		Down
	Right/TA/News/Inf		Right
	Left/PTY Search		Left
	Audio Vol+		Vol +
	Audio Vol-		Vol -
	Sleep		Sleep





Originalfernbedienung Ersatzfernbedienung

	A.Stby	+	Shift + 0
	Clock/Timer		AV
	Return		Back
	Cancel		Exit
	Set Up		D. Menu
	Stop		Stop
	Play		Play
	Pause		Pause
	←/Tuner/Play	+	Shift + Back
	I<<		I<<
	>>I		>>I
	<<		<<
	>>		>>
	Play/Pause		Blue
	Play/Pause USB		Yellow
	Play/Pause iPod A		Red
	Play/Pause iPod B		Green

Originalfernbedienung Ersatzfernbedienung

	Audio/MPX		Dual
	Subtitle		Subt
	Zoom		Eject
	Tuner/Audio In		Text
	File Type	+	Shift + TV/R
	Repeat	+	Shift + Text
	VFP/Scan Mode		Format
	3D Phonic/HP Surr		3D
	C.Voice	+	Shift + List
	DVD/Audio In	+	Shift + Format
	Sound Mode		List
	My Sound	+	Shift + Mute
	V.Bass	+	Shift + 7
	Super Bass		Ch +
	Super Bass Level-		Ch -
	Mic Vol+	+	Shift + Right
	Mic Vol-	+	Shift + Left







**Originalfernbedienung Ersatzfernbedienung**

	Karaoke Setting	+	Shift + 9
	Mic Mix	+	Shift + 8
	Power Tv	+	Shift + Power
	Repeat A-B	+	Shift + Play
	Angle	+	Shift + 2
	Tv Channel+	+	Shift + Ch +
	Tv Channel-	+	Shift + Ch -
	Tv Vol+	+	Shift + Vol +
	Tv Vol-	+	Shift + Vol -
	I<< Group/Title Skip	+	Shift + I<<
	Group/Title Skip >>I	+	Shift + >>I
	>> Group/Title	+	Shift + 6
	Enter/Set		Ok

**Originalfernbedienung Ersatzfernbedienung**