






 
 


 

 





 

 















 







 

















 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Source		AV
	HDMI		D. Menu
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	TTX/MIX		Text
	PRE-CH		Pre Ch
	Vol+		Vol +
	Vol-		Vol -

Originalfernbedienung Ersatzfernbedienung

	Mute		Mute
	P+		Ch +
	P-		Ch -
	CH List		List
	Menu		Menu
	Guide		Guide
	Smart Hub		Smart
	Tools		Options
	Info		Info
	Back/Return		Back
	Exit		Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Red		Red





Originalfernbedienung Ersatzfernbedienung

	Green		Green
	Yellow		Yellow
	Blue		Blue
	Family Story		Media
	Search		TV/R
	P.Size		Format
	Support		Eject
	D		3D
	AD/Subt.		Subt
	<<<		<<<
	I<<<		I<<<
	Pause		Pause
	>>>		>>>
	>>I		>>I
	Rec		Rec
	Play		Play
	Stop		Stop

Originalfernbedienung Ersatzfernbedienung