




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Goto		Text / Goto
	Info		Info / Angle
	Slow		Shift + Play /
	Zoom		Zoom / Size
	Repeat		Shift + Green / APP / Repeat

Originalfernbedienung Ersatzfernbedienung

	A - B		Yellow / YouTube / Repeat
	<<		<< / Tune-
	Play / Pause		Play / Slow
	Play / Pause		Pause / Step / Freeze
	>>		>> / Tune+
	I<<		I<< / Preset-
	Stop		Stop / Hold
	>>I		>>I / Preset+
	Menu		Menu / Home
	Vol -		Vol-
	Vol +		Vol+
	Exit		Exit / Cancel / Clear
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down





Originalfernbedienung Ersatzfernbedienung

	Option	 +  <small>OPT-TOOLS</small>	Shift + Setup / OPT / Tools
	Setup	 <small>OPT-TOOLS</small>	Setup / OPT /
	TV SYS	 <small>TOP MENU</small>	D.Menu / Top
	Audio	 <small>LANG I/II</small>	Audio / Lang I/II
	Subtitle	 <small>EQ</small>	Subtitle / EQ
	16:9 / 4:3	 <small>FORMAT PICTURE</small>	Picture / Format
	Red	 <small>NETFLIX SEARCH</small>	Red / Netflix / Search
	Green	 <small>APP REPEAT</small>	Green / APP / Repeat
	Open / Close	 <small>SURROUND</small>	Eject / Surround

Originalfernbedienung Ersatzfernbedienung