


 
 
 

 
 

 
 
 
 

 

 

 


 















Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	Source		AV
	P.Mode		Shift + Format
	S.Mode		Shift + Dual
	I/II Audio		Dual
	Sleep		Sleep
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0

Originalfernbedienung Ersatzfernbedienung

	List		List
	Recall		Back
	TV Menu		Menu
	Exit		Exit
	Text		Text
	Info / Display		Info
	Up		Up
	Right		Right
	Down		Down
	Left		Left
	OK / Enter		Ok
	V -		Vol -
	V +		Vol +
	P -		Ch -
	P +		Ch +
	Red		Red
	Green		Green





Originalfernbedienung	Ersatzfernbedienung
-----------------------	---------------------

	Yellow		Yellow
	Blue		Blue
	Subtitle		Subt
	Hold		Pause
	Size		Format
	Reveal		Options
	Mix		Shift + Text
	Zoom / Index		Eject
	FAV		Pre Ch
	Subpage		Shift + Subt
	TV / Radio		TV/R
	EPG		Guide

Originalfernbedienung	Ersatzfernbedienung
-----------------------	---------------------