






 

 

 
 

 


 





 

 

 










Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	Audio		Dual
	TV / STB		Shift + TV/R
	TV / R		TV/R
	Sleep		Sleep
	SUB		Subt
	TXT		Text
	P / N		Shift + 1
	Recall		Pre Ch
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7

Originalfernbedienung Ersatzfernbedienung

	8		8
	9		9
	0		0
	PGUP		Vol +
	PGDN		Vol -
	SAT		Shift + AV
	FAV +		Ch +
	FAV -		Ch -
	EPG		Guide
	Fav		Shift + Pre Ch
	Up		Up
	Right		Right
	Down		Down
	Left		Left
	OK		Ok
	Menu		Menu
	Exit		Exit





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
 Red	 Red	 <<	 <<
 Green	 Green	 >>	 >>
 Yellow	 Yellow	 Play / Pause	 Play
 Blue	 Blue	 > <	 Shift + Pause
 Pause	 Pause	 <<	 <<
 Zoom	 Eject	 >>	 >>
 Edit	 Format		
 Info	 Info		
 USB	 AV		
 MP3	 Media		
 JPEG	 Smart		
 PVR List	 List		
 A - B	 Back		
 T.S.	 Shift + 2		
 Goto	 Options		
 Stop	 Stop		
 Rec	 Rec		

