 

 


 
 


 
 
 
 





 





 

 





Originalfernbedienung Ersatzfernbedienung

	Standby		Power
	Speakers		Smart
	Input Up		Ch +
	Input Down		Ch -
	Boost		Media
	USB/Tuner		TV/R
	A/Pops		Red
	B/Classic		Green
	C/P+Bass		Yellow
	D/C+Bass		Blue
	1/Jazz		1
	2/Rock		2
	3/Bass1		3
	4/Bass2		4
	5/J+Bass		5
	6/R+Bass		6
	7/EQ Off		7

Originalfernbedienung Ersatzfernbedienung

	8/Repeat		8
	Auto		Options
	AM/FM		Dual
	Memory		Rec
	Random/RDS/ID		Subt
	Play		Play
	Pause		Pause
	Stop		Stop
	Vol+/Folder+		Vol +
	Vol-/Folder-		Vol -
	Mute		Mute
	Menu		Menu
	Scan >I/Track+		>>I
	I< Scan/Track-		I<<

