











 


 







 










Originalfernbedienung Ersatzfernbedienung

	Power		Power
	16:9 / Wide		Picture / Format
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	F1		Exit / Cancel / Clear
	[:≡]		D.Menu / Top
	Smart S		Sound / Title
	Smart P		Shift + Picture / Format

Originalfernbedienung Ersatzfernbedienung

	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	Vol +		Vol+
	Menu		Menu / Home
	CH +		CH+ / Page+
	Vol -		Vol-
	Source		AV / Input / RDS
	CH -		CH- / Page-
	Info		Info / Angle
	Sleep		Sleep / Timer
	Recall		Back / Return
	L / R		Eject / Surround
	Index / Play		Play / Slow
	Index / Play		Display / Media



