
 




Originalfernbedienung Ersatzfernbedienung

	Power CD		Power
	Power		9
	Power USB/Audio		Shift + Power
	Open/Close		Eject / Surround
	Bluetooth/FM		Shift + 9
	CD		3
	USB/Audio In		8
	Album/Preset Up		Up
	Album/Preset Up Bluetooth/FM		CH+ / Page+
	Album/Preset Up USB/Audio In		Shift + Up
	I<< CD		I<< / Preset-
	I<< Bluetooth/FM		Shift + Left
	I<< USB/Audio In		Left
	Play CD		Play / Slow
	Pause CD		Pause / Step / Freeze
	Play/Pause USB/Audio In		Shift + Play /
	>>I CD		>>I / Preset+

Originalfernbedienung Ersatzfernbedienung

	>>I Bluetooth/FM		Shift + >>I / Preset+
	>>I USB/Audio In		Shift + I<< / Preset-
	Album/Preset Down CD		Down
	Album/Preset Down		CH- / Page-
	Album/Preset Down USB/Audio		Shift + Down
	Repeat		Green / APP / Repeat
	Repeat USB/Audio		Back / Return
	Vol+		Vol+
	Stop CD		Stop / Hold
	Stop USB/Audio In		Shift + Stop /
	Vol-		Vol-
	Shuffle		Blue / Prime Video / Random
	Shuffle USB/Audio In		AV / Input / RDS
	Mute		Mute / Dimmer
	Display		Display / Media
	Display USB/Audio In		Shift + Display / Media
	Prog		TV/Radio /



