





 
 
 
 
 
 
 
 
 
 
 

 


 





 

 
 
 
 
 

 
 
 
 
 
 
 
 

 


 
 

 
 

 

 



 

 

 





Originalfernbedienung Ersatzfernbedienung

|   |          |   |       |
|---|----------|---|-------|
|    | Standby  |    | Power |
|    | Mute     |    | Mute  |
|    | 1        |    | 1     |
|    | 2        |    | 2     |
|    | 3        |    | 3     |
|    | 4        |    | 4     |
|    | 5        |    | 5     |
|    | 6        |    | 6     |
|    | 7        |    | 7     |
|    | 8        |    | 8     |
|    | 9        |    | 9     |
|   | 0        |   | 0     |
|  | Info     |  | Info  |
|  | Recall   |  | Back  |
|  | EPG      |  | Guide |
|  | Audio    |  | Dual  |
|  | Subtitle |  | Subt  |


 
 





 
 

 





Originalfernbedienung Ersatzfernbedienung

|   |            |   |        |
|---|------------|---|--------|
|    | TV / Radio |    | TV/R   |
|    | Menu       |    | Menu   |
|    | Exit       |    | Exit   |
|    | Up         |    | Up     |
|    | Right      |    | Right  |
|    | Down       |    | Down   |
|    | Left       |    | Left   |
|    | OK         |    | Ok     |
|    | Record     |    | Rec    |
|    | Stop       |    | Stop   |
|    | Vol +      |    | Vol +  |
|   | Vol -      |   | Vol -  |
|  | TTX        |  | Text   |
|  | FAV        |  | Pre Ch |
|  | CH +       |  | Ch +   |
|  | CH -       |  | Ch -   |
|  | Media      |  | Media  |





Originalfernbedienung Ersatzfernbedienung

|  |          |  |        |
|--|----------|--|--------|
|   | I<< Prev |   | I<<    |
|   | Play     |   | Play   |
|   | << Rew   |   | <<     |
|   | USB      |   | Smart  |
|   | >>I Next |   | >>I    |
|   | Pause    |   | Pause  |
|   | >> Fwd   |   | >>     |
|   | Red      |   | Red    |
|   | Green    |   | Green  |
|   | Yellow   |   | Yellow |
|  | Blue     |  | Blue   |
|  |          |  |        |
|  |          |  |        |
|  |          |  |        |
|  |          |  |        |
|  |          |  |        |
|  |          |  |        |
|  |          |  |        |
|  |          |  |        |
|  |          |  |        |

Originalfernbedienung Ersatzfernbedienung

|  |  |
|--|--|
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |

