 





 


 
 
 




 
 
 


 


 

 



 

 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Display	 + 	Shift + Info
	V-Mode		Format
	Open / Close		Eject
	Language		Dual
	Step	 + 	Shift + Stop
	Slow	 + 	Shift + Pause
	Repeat		Text
	Angle		TV/R
	Resume		List
	A-B	 + 	Shift + Text
	Return		Back
	Subt / CD Ripping		Subt
	DVD / USB		Media
	Time		AV
	Zoom	 + 	Shift + Eject
	Menu		Menu

Originalfernbedienung Ersatzfernbedienung

	Title		Info
	Up		Up
	Right		Right
	Down		Down
	Left		Left
	Enter		Ok
	Setup		Options
	PBC		Smart
	P / N		D. Menu
	Pause		Pause
	Play		Play
	Vol +		Vol +
	Vol -		Vol -
	Prog		Sleep
	L / R	 + 	Shift + Dual
	Stop		Stop
	1		1





	Originalfernbedienung	Ersatzfernbedienung		Originalfernbedienung	Ersatzfernbedienung
	2	2	2		
	3	3	3		
	4	4	4		
	5	5	5		
	6	6	6		
	7	7	7		
	8	8	8		
	9	9	9		
	0 / 10	0	0		
	10+	GUIDE	Guide		
	MUTE	MUTE	Mute		
	REV	<<	<< Rev		
	EWD	>>	Fwd >>		
	PREV	⏮	I<< Prev		
	NEXT	⏭	Next >>I		

