












































Originalfernbedienung Ersatzfernbedienung

On/Off		Power
Audio Off		Mute / Dimmer
Play		Play / Slow
Pause		Pause / Step / Freeze
Stop		Stop / Hold
Record		Rec / Rec Mode
Rewind		<< / Tune-
F.Forward		>> / Tune+
Prev.		I<< / Preset-
Next		>>I / Preset+
Title		Sound / Title
Subt.		Subtitle / EQ
Open/Close		Eject / Surround
Zoom		Zoom / Size
Progr.		TV/Radio /
Top Menu		D.Menu / Top
Input Source		AV / Input / RDS

Originalfernbedienung Ersatzfernbedienung

Menu		Menu / Home
Menu Up		Up
Auto/Track		Info / Angle
Menu Left		Left
OK Enter		OK
Menu Right		Right
C/CH		Exit / Cancel / Clear
Menu Down		Down
Return		Back / Return
Volume+		Vol+
DVD/TV		Smart / List
Slow Up		CH+ / Page+
Volume-		Vol-
Display		Display / Media
Slow Down		CH- / Page-
1		1
2		2



Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
3			
4			
5			
6			
7			
8			
9			
+10	 Guide / EPG / -/--		
0			
Mark	 Fav / Marker / PC		
Repeat/1/All	 Green / APP / Repeat		
Rep/A-B	 Yellow / YouTube / Repeat		

