
 
 
 

 




 




 
 
 
 


 




**Originalfernbedienung Ersatzfernbedienung**

On/Off		Power
Next		>>I
Audio Out		Mute
Slow Down	 + 	Shift + <<
F.Adv	 + 	Shift + Media
Mon/TV		Subt
Sp/Lp/Speed		Eject
Stop		Stop
Slow/Dpss-	 + 	Shift + Ch -
Auto/Track		Smart
Video/Go-To		D. Menu
Slow/Dpss+	 + 	Shift + Ch +
Pause		Pause
Menu		Menu
VCR/TV		Media
Menu Up		Up
Display		Info

**Originalfernbedienung Ersatzfernbedienung**








 


 
 
 
 
 

Menu Left		Left
OK Enter		Ok
Menu Right		Right
Exit		Exit
Menu Down		Down
T.Set/Clock		Back
Tracking+		Vol +
Tracking-		Vol -
Prev.		I<<
Audio		Dual
1		1
2		2
3		3
4		4
5		5
6		6
7		7



Originalfernbedienung Ersatzfernbedienung

8		8
9		9
-/--		Guide
0		0
Progr/C/CH		Pre Ch
Store	 + 	Shift + Smart
Rewind		<<
Case Tape		3D
Next Sv+V	 + 	Shift + >>I
Play		Play
Vps/Pdc		Format
F.Forward		>>
Search Index		TV/R
Record		Rec
Encode		Options
On/Off	 + 	Shift + Power
Counter Clock		Red

Originalfernbedienung Ersatzfernbedienung

Counter/Memor		Green
Input Source		AV
Counter Reset		Yellow
Skip/Search	 + 	Shift + TV/R
Info/Intro	 + 	Shift + Info
Repeat		Text
Audio Dub	 + 	Shift + Dual
Frame Up		Ch +
Timer/Record	 + 	Shift + AV
Frame Down		Ch -
Timer/Sleep		Sleep
X2 Rew/Play		List

