 




 
 
 








 

 




 

 




 
 
 
 



 

 

 

 

 
 

 



 
 
 





Originalfernbedienung Ersatzfernbedienung

	Standby		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Info		Info
	Recall		Back
	Audio		Dual
	Subtitle		Subt
	TV / Radio		TV/R

Originalfernbedienung Ersatzfernbedienung

	Menu		Menu
	Exit		Exit
	Up		Up
	Right		Right
	Down		Down
	Left		Left
	OK		Ok
	Record		Rec
	Stop		Stop
	Vol +		Vol +
	Vol -		Vol -
	TTX		Text
	FAV		Pre Ch
	CH +		Ch +
	CH -		Ch -
	Media		Media
	I<< Prev		I<<





Originalfernbedienung Ersatzfernbedienung

	Play		Play
	<< REV		<<
	USB		Smart
	Next >>		>>
	Pause		Pause
	FWD >>		>>
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue

Originalfernbedienung Ersatzfernbedienung

