 

 

 





 







 







 










Originalfernbedienung Ersatzfernbedienung

	Standby		Power
	Info		Info / Angle
	Subtitle		Subtitle / EQ
	Mute		Mute / Dimmer
	I<<		I<< / Preset-
	Play		Play / Slow
	<<		<< / Tune-
	>>I		>>I / Preset+
	Pause		Pause / Step / Freeze
	>>		>> / Tune+
	Menu		Menu / Home
	Up		Up
	CH+		CH+ / Page+
	Exit		Exit / Cancel / Clear
	Vol-		Vol-
	Left		Left
	OK		OK

Originalfernbedienung Ersatzfernbedienung

	Right		Right
	Vol+		Vol+
	Record		Rec / Rec Mode
	CH-		CH- / Page-
	Down		Down
	Stop		Stop / Hold
	1		1
	2		2
	3		3
	EPG		Guide / EPG / -/-
	4		4
	5		5
	6		6
	Back		Back / Return
	7		7
	8		8
	9		9





Originalfernbedienung Ersatzfernbedienung

0	0	HDMI - BAT	0
MEDIA	Media	MEDIA DISPLAY	Display / Media
USB	USB	SHIFT + USB	Shift + 8
TV/RADIO	Tv/Radio	PROGRAM TV/RADIO	TV/Radio /
AUDIO	Audio	LANG I/II	Audio / Lang I/II
TTX	TTX	GOTO TEXT	Text / Goto
TIMER	Timer	TIMER SLEEP	Sleep / Timer
FAV	FAV	PC FAV MARKER	Fav / Marker / PC
RES	Res	LIST SMART	Smart / List
Red	Red	NETFLIX SEARCH	Red / Netflix / Search
Green	Green	APP REPEAT	Green / APP / Repeat
Yellow	Yellow	YouTube REPEAT A-B	Yellow / YouTube / Repeat
Blue	Blue	Prime Video RANDOM	Blue / Prime Video / Random

Originalfernbedienung Ersatzfernbedienung
















 





Originalfernbedienung Ersatzfernbedienung

	Standby		Power
	Info		Info / Angle
	Subtitle		Subtitle / EQ
	Mute		Mute / Dimmer
	I<<		I<< / Preset-
	Play		Play / Slow
	<<		<< / Tune-
	>>I		>>I / Preset+
	Pause		Pause / Step / Freeze
	>>		>> / Tune+
	Menu		Menu / Home
	Up / CH+		CH+ / Page+
	Up / CH+		Up
	Exit		Exit / Cancel / Clear
	Left / Vol-		Vol-
	Left / Vol-		Left
	OK		OK

Originalfernbedienung Ersatzfernbedienung

	Right / Vol+		Vol+
	Right / Vol+		Right
	Record		Rec / Rec Mode
	Down / CH-		Down
	Down / CH-		CH- / Page-
	Stop		Stop / Hold
	1		1
	2		2
	3		3
	EPG		Guide / EPG / -/-
	4		4
	5		5
	6		6
	Back		Back / Return
	7		7
	8		8
	9		9





Originalfernbedienung Ersatzfernbedienung

0	0	HDMI - BAT 0	0
MEDIA	Media	MEDIA DISPLAY	Display / Media
USB	USB	SHIFT + USB 8	Shift + 8
TV/RADIO	TV / Radio	PROGRAM TV/RADIO	TV/Radio /
AUDIO	Audio	LANG I/II AUDIO	Audio / Lang I/II
TTX	TTX	GOTO TEXT	Text / Goto
TIMER	Timer	TIMER SLEEP	Sleep / Timer
FAV	Fav	PC FAV MARKER	Fav / Marker / PC
RES	Res.	LIST SMART	Smart / List
Red	Red	NETFLIX SEARCH	Red / Netflix / Search
Green	Green	APP REPEAT	Green / APP / Repeat
Yellow	Yellow	YouTube REPEAT A-B	Yellow / YouTube / Repeat
Blue	Blue	Prime Video RANDOM	Blue / Prime Video / Random

Originalfernbedienung Ersatzfernbedienung

