
 





 

 
 




 
 
 


 


 

 
 

 






Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|--------|---|---------------|
|  | Power |  | Power |
|  | SAT |  | AV |
|  | Mute |  | Mute |
|  | PGUP |  | Shift + Ch + |
|  | PGDN |  | Shift + Ch - |
|  | FAV + |  | Shift + Right |
|  | FAV - |  | Shift + Left |
|  | Red |  | Red |
|  | Green |  | Green |
|  | Yellow |  | Yellow |
|  | Blue |  | Blue |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|--------|---|-------|
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |
|  | SUB |  | Subt |
|  | Audio |  | Dual |
|  | TV / R |  | TV/R |
|  | Sleep |  | Sleep |
|  | TXT |  | Text |
|  | RCL |  | Back |
|  | Menu |  | Menu |
|  | Info |  | Info |
|  | VL + |  | Vol + |
|  | VL - |  | Vol - |
|  | Up |  | Up |
|  | Right |  | Right |
|  | Down |  | Down |



