



**Originalfernbedienung Ersatzfernbedienung**

	Standby		Power
	Open / Close		Eject
	Repeat		Text
	A-B		Play
	Program		Sleep
	Mute		Mute
	Y.Pb.Pr		TV/R
	VGA		Format
	Display		Info
	REV		<<
	FWD		>>
	Volume+		Vol +
	Volume-		Vol -
	Prev		I<<
	Next		>>I
	Step / Pause		Pause
	Stop		Stop

**Originalfernbedienung Ersatzfernbedienung**

	Title		List
	Menu		Menu
	Setup		Options
	Return		Back
	Up		Up
	Left		Left
	Play / OK		Ok
	Right		Right
	Down		Down
	Audio		Dual
	Subtitle		Subt
	Angle		3D
	Clear		Exit
	1		1
	2		2
	3		3
	4		4





Originalfernbedienung Ersatzfernbedienung

	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Zoom		Shift + Eject
	A-Time		AV

Originalfernbedienung Ersatzfernbedienung


