 



 


 
 
 

 




 




 
 


 



 

 
 
 





 
 


 



 
 




 
 

 
 


 


 

 

 




Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
 Power	 Power	 Vol -	 Vol -
 Mute	 Mute	 Up	 Up
 DVB / Analogue	 TV/R	 Right	 Right
 AV	 AV	 Down	 Down
 Multimedia	 Media	 Left	 Left
 1	 1	 OK / Select	 Ok
 2	 2	 PR/Page +	 Ch +
 3	 3	 PR/Page -	 Ch -
 4	 4	 S.Effect	 Pre Ch
 5	 5	 Guide	 Guide
 6	 6	 Subtitle	 Subt
 7	 7	 Edit	 Shift + Pre Ch
 8	 8	 Sleep	 Sleep
 9	 9	 Still	 Stop
 0	 0	 Menu	 Menu
 Audio / I/II	 Dual	 Aspect	 Format
 Vol +	 Vol +	 Normal	 Smart





Originalfernbedienung Ersatzfernbedienung

	i / Recall		Back
	Cancel / Exit		Exit
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Text		Text
	Reveal		Options
	T.Cancel		Shift + Exit
	Size		Eject
	Subcode		Shift + Subt
	Hold		Pause
	Index		Info

Originalfernbedienung Ersatzfernbedienung

