






 
 
 
 

 

 

 
 

 



 

 
 
 
 
 
 
 





Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-------|---|---------------|
|  | Power |  | Power |
|  | Mute |  | Mute |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |
|  | 10+ |  +  | Shift + Guide |
|  | SUBTL |  | Subt |
|  | EPG |  | Guide |
|  | Menu |  | Menu |
|  | Vol + |  | Vol + |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|------------------|---|---------------|
|  | Vol - |  | Vol - |
|  | CH + |  | Ch + |
|  | CH - |  | Ch - |
|  | Exit |  | Exit |
|  | Red / USB Left |  | Red |
|  | Red / USB Left |  +  | Shift + Left |
|  | Green / USB |  | Green |
|  | Green / USB |  +  | Shift + Down |
|  | Yellow / USB Up |  | Yellow |
|  | Yellow / USB Up |  +  | Shift + Up |
|  | Blue / USB Right |  | Blue |
|  | Blue / USB Right |  +  | Shift + Right |
|  | Up |  | Up |
|  | Left |  | Left |
|  | Enter |  | Ok |
|  | Right |  | Right |
|  | Down |  | Down |





Originalfernbedienung Ersatzfernbedienung

| | | | |
|----------------|--------------------|---------------------------|----------------|
| PREV QV | QV | SETTINGS OPT | Options |
| NEXT FAV | FAV | FAV PRE-CH | Pre Ch |
| SOURCE ↻ | Source | TIMER AV | AV |
| SLEEP ⏻ | Sleep | PROG SLEEP | Sleep |
| PICTURE -P- | Picture | SHIFT + PICTURE FORMAT | Shift + Format |
| SOUND -S- | Sound | SHIFT + SOUND DUAL | Shift + Dual |
| DISPLAY Ⓜ | Display | DISPLAY INFO | Info |
| TOP I/II | I/II / Top | SOUND DUAL | Dual |
| REV FAV- | FAV - / REV | ⏪ | << |
| FWD FAV+ | FAV + / FWD | ⏩ | >> |
| TEXT USR/CR | USR/CR / Text | APP MEDIA | Media |
| TEXT USR/CR | USR/CR / Text | REPEAT TEXT | Text |
| INDEX ▶ | Play/Pause / Index | PLAY MODE ▶ | Play |
| INDEX ▶ | Play/Pause / Index | SHIFT + DISPLAY INFO | Shift + Info |
| INDEX ▶ | Play/Pause / Index | ⏸ | Pause |
| CANCEL ■ | Stop / Cancel | ■ | Stop |
| CANCEL ■ | Stop / Cancel | SHIFT + CLEAR EXIT | Shift + Exit |




 

 

Originalfernbedienung Ersatzfernbedienung

| | | | |
|----------------------------|-----------------|------------------------|---------------|
| SIZE Ⓜ | Size | PICTURE FORMAT | Format |
| ESC PROG MIX | Prog / Mix | HOME SMART | Smart |
| ESC PROG MIX | Prog / Mix | SHIFT + PROG SLEEP | Shift + Sleep |
| RETURN SUBPG | Return / SUBPG | RETURN BACK | Back |
| APX TX REPEAT REVEAL | Repeat / Reveal | SHIFT + RETURN BACK | Shift + Back |
| SEARCH HOLD | Search / Hold | SEARCH TV/R | TV/R |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

 







 
 

 









Originalfernbedienung Ersatzfernbedienung

| | | |
|--|---|---------|
| |  | Power |
| |  | AV |
| |  | Exit |
| |  | Menu |
| |  | Dual |
| |  | Media |
| |  | Options |
| |  | Text |
| |  | TV/R |
| |  | 1 |
| |  | 2 |
| |  | 3 |
| |  | 6 |
| |  | 5 |
| |  | 4 |
| |  | 7 |
| |  | 8 |

Originalfernbedienung Ersatzfernbedienung

| | | |
|--|---|---------------|
| |  | 9 |
| |  | 0 |
| |  | Guide |
| |  | Up |
| |  | Right |
| |  | Ok |
| |  | Left |
| |  | Down |
| |  | Subt |
| |  | Pause |
| |  | Rec |
| |  | << |
| |  | Play |
| |  | >> |
| |  | Shift + Media |
| |  | Shift + Dual |
| |  | Shift + 6 |

