


 








 


 
 

 

 

 

 

 
 
 


 
 





Originalfernbedienung Ersatzfernbedienung

	Power TV		Power
	Power STB		Shift + Power
	Source		AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	TTX/MIX		Text
	PRE-CH		Pre Ch
	Vol+		Vol +
	Vol-		Vol -

Originalfernbedienung Ersatzfernbedienung

	Mute		Mute
	CH.List		List
	P+		Ch +
	P-		Ch -
	Menu		Menu
	Smart Hub		Smart
	Guide		Guide
	Tools		Options
	Info		Info
	Back/Return		Back
	Exit		Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Red		Red





Originalfernbedienung Ersatzfernbedienung

	Green		Green
	Yellow		Yellow
	Blue		Blue
	D		Dual
	Status		TV/R
	More		3D
	E-Manual		D. Menu
	Recommend		Format
	AD/Subt		Subt
	<<		<<
	<<		<<
	Pause		Pause
	>>		>>
	>>		>>
	Rec		Rec
	Play		Play
	Stop		Stop

Originalfernbedienung Ersatzfernbedienung

