 

 


 

 
 

 
 

 

 
 

 

 






 
 
 
 

 





Originalfernbedienung Ersatzfernbedienung

	Standby/On		Power
	Open/Close		Eject
	Audio		Dual
	Subtitle		Subt
	Angle		Options
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Clear		Exit
	Enter		Pre Ch

Originalfernbedienung Ersatzfernbedienung

	Top Menu		Shift + Menu
	Menu		Menu
	Home Menu		D. Menu
	Return		Back
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	<</</<		<<
	Play		Play
	>/>/>>		>>
	I<<		I<<
	Pause		Pause
	Stop		Stop
	>>I		>>I
	Play Mode		Shift + Play





Originalfernbedienung Ersatzfernbedienung

	Surround		Format
	Zoom	+	Shift + Eject
	Display		Info

Originalfernbedienung Ersatzfernbedienung

