 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	Mode		Format
	Open / Close		Eject
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Clear		Exit
	V +		Vol +
	Select		Sleep

Originalfernbedienung Ersatzfernbedienung

	V -		Vol -
	Search		TV/R
	Setup		Options
	Zoom		Shift + Eject
	Info		Info
	Pop Up Menu		Menu
	Return		Back
	Top Menu		Shift + Menu
	Up		Up
	Left		Left
	Right		Right
	Down		Down
	Enter		Ok
	Play		Play
	Pause		Pause
	I<< Prev		I<<
	>>I Next		>>I





Originalfernbedienung	Ersatzfernbedienung
Stop	Stop
Slow	+ Shift + Right
<< REW	<<
>> FWD	>>
P +	Ch +
P -	Ch -
Red	Red
Green	Green
Yellow	Yellow
Blue	Blue
Subtitle	Subt
Angle Rotate	3D
Audio	Dual
Rec	Rec
DUNE	Smart
URL	Media

Originalfernbedienung	Ersatzfernbedienung

