



**Originalfernbedienung Ersatzfernbedienung**

	Power		Power
	O		Guide
	Rec		Rec
	I<<		I<<
	Red		Red
	Green/[[]]		Green
	Stop		Stop
	Play		Play
	Yellow / List		Yellow
	>>I		>>I
	PIP [■]		Blue
	AV/[?]		AV
	I-II/[≡≡]		Dual
	[<>]/[+]		Format
	[-O-]		Exit
	Menu		Menu
	[≡]		Text

**Originalfernbedienung Ersatzfernbedienung**

	Pause		Pause
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Smart J		Smart
	Smart [ ]		Media
	P+		Ch +
	P-		Ch -
	1		1
	2		2
	3		3
	4		4





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				
	0		0				
	[i+]		Info				
	P<P		Pre Ch				





 



 






**Originalfernbedienung Ersatzfernbedienung**

	Power		Power
	O		Guide
	Rec		Rec
	I<<		I<<
	Red		Red
	Green/[ ]		Green
	Stop		Stop
	Play		Play
	Yellow / List		Yellow
	PIP [ ]		Blue
	>>I		>>I
	AV/[?]		AV
	I-II/[≡≡]		Dual
	[<>]/[+]		Format
	-O-		Exit
	Menu		Menu
	Pause		Pause

**Originalfernbedienung Ersatzfernbedienung**

	[≡]		Text
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Smart J		Smart
	Smart [ ]		Media
	P+		Ch +
	P-		Ch -
	1		1
	2		2
	3		3
	4		4





Originalfernbedienung    Ersatzfernbedienung

	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	[i+]		Info
	P<P		Pre Ch

Originalfernbedienung    Ersatzfernbedienung





**Originalfernbedienung Ersatzfernbedienung**

	Power		Power
	I<<		I<<
	>>I		>>I
	AV/[?]		AV
	I-II[≡ ≡]		Dual
	[<>]/[+]		Format
	-O-		Exit
	Pause		Pause
	[≡]		Text
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute

**Originalfernbedienung Ersatzfernbedienung**

	Smart J		Smart
	Smart [ ]		Media
	P+		Ch +
	P-		Ch -
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	P<P		Pre Ch

