






 

























 




























**Originalfernbedienung Ersatzfernbedienung**

	TV		TV/Radio /
	TV		Shift + 1
	Audio		Audio / Lang I/II
	TV / VCR		AV / Input / RDS
	Power		Power
	1		1
	2		2
	3		3
	Text		Text / Goto
	4		4
	5		5
	6		6
	Subtitle		Subtitle / EQ
	7		7
	8		8
	9		9
	Sound		Sound / Title

**Originalfernbedienung Ersatzfernbedienung**

	Alt		Fav / Marker / PC
	0		0
	i		Info / Angle
	Setup		Setup / OPT /
	Exit		Exit / Cancel / Clear
	Up		Up
	Navigator		Smart / List
	Left		Left
	OK		OK
	Right		Right
	Vol +		Vol+
	Down		Down
	CH +		CH+ / Page+
	Vol -		Vol-
	Mute		Mute / Dimmer
	Recall		Back / Return
	CH -		CH- / Page-



