


 




 

 
 


 
 


 
 
 

 


 
 
 
 
 
 


 




Originalfernbedienung    Ersatzfernbedienung

	Power		Power
	SAT		AV
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Texts		Smart
	Back		Back
	Vol +		Vol +
	Vol -		Vol -

Originalfernbedienung    Ersatzfernbedienung

	Menu		Menu
	Exit		Exit
	Guide		Guide
	CH +		Ch +
	CH -		Ch -
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	Page Down		Shift + Ch -
	Page Up		Shift + Ch +
	Info		Info
	Subtitle		Subt
	Audio		Dual
	Check		Shift + Ok
	Red		Red




**Originalfernbedienung Ersatzfernbedienung**

	Green		Green
	Yellow		Yellow
	Blue		Blue
	Res		Format
	Sleep		Sleep
	TV / Radio		TV/R
	Text		Text
	Play		Play
	Stop		Stop
	Pause		Pause
	Rec		Rec
	Repeat		Shift + Text
	Step		Shift + Pause
	<<		<<
	>>		>>
	Picture		Shift + Format
	Play Text		Shift + Play

**Originalfernbedienung Ersatzfernbedienung**

	<<		<<
	>>		>>
	List		List
	Zoom		Eject
	Mark		Pre Ch

