



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Eject		Eject
	I<<		I<<
	>>I		>>I
	<<		<<
	>>		>>
	Play / Pause		Play
	Play / Pause		Pause
	Stop		Stop
	TV/TXT /		Shift + Text
	TV/TXT /		List
	Cancel / Zoom		Shift + Exit
	Reveal / Subtitle		Shift + Subt
	Hold / Menu		Shift + Stop
	Hold / Menu		D. Menu
	Size / Angle		3D
	Subpage / Title		Shift + List




 






 






 











 
 



Originalfernbedienung Ersatzfernbedienung

	Index / Goto		Info
	Red / Program		Red
	Green / Slow		Green
	Yellow / Repeat		Yellow
	Blue / A-B		Blue
	CH +		Ch +
	CH -		Ch -
	Sys-Menu		Menu
	Input		AV
	Vol +		Vol +
	Vol -		Vol -
	DVD		Media
	DVD-Setup		Options
	Up		Up
	Left		Left
	OK		Ok
	Right		Right





Originalfernbedienung Ersatzfernbedienung

	Down		Down
	DVB		Smart
	Sys-Exit		Exit
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--		Shift + Guide
	Recall		Back
	Picture		Shift + Format
	Sound		Shift + Dual

Originalfernbedienung Ersatzfernbedienung

	Nicam / A2		Shift + Mute
	Mute		Mute
	Sleep		Sleep
	TV / Radio		TV/R
	FAV		Pre Ch
	Fav +		Shift + Right
	Fav -		Shift + Left
	Pic. Format		Format
	Subtitle		Subt
	Text		Text
	Display		Shift + Info
	Language		Dual
	EPG		Guide

