 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Disc CD		Media
	Play CD		Play
	Pause CD		Pause
	A<>B/Repeat		Text
	Intro CD		Ok
	I<< CD		I<<















 






 





 
Originalfernbedienung Ersatzfernbedienung

	>>I CD		>>I
	Stop CD		Stop
	Deck Sel A		Guide
	Deck Sel B		Pre Ch
	> Deck		Shift + >>I
	< Deck		Shift + I<<
	>>Deck		>>
	<< Deck		<<
	Pause Deck		Shift + Pause
	Stop Deck		Shift + Stop
	Rec Deck		Rec
	CD		Yellow
	VCR		Smart
	AUX		Red
	Tape		Green
	Tuner		Blue
	Sleep		Sleep





Originalfernbedienung Ersatzfernbedienung

	Display		Info
	FM Mode		TV/R
	P.Scan		Back
	Memory		Menu
	Speaker A		Right
	Speaker B		Left
	Balance Up		Up
	Balance Down		Down
	Treble/Bass Up		Ch +
	Treble/Bass Down		Ch -
	Tone Sel		3D
	Volume+		Vol +
	Volume-		Vol -
	Mute		Mute

Originalfernbedienung Ersatzfernbedienung

